

 
ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0217 / P0218

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):



Mounting Plate (A)



Mounting Screw (B)



Wire Connector (C)



Fixture Mounting Screw (D)



Green Grounding Screw (E)



Lock Nut (F)



Ball Nut (G)




Warning: LED electronics can be damaged by electro static discharge (ESD) shock. Before installation, discharge yourself by touching a grounded bare metal surface to remove this hazard. To avoid damage, do not touch the LED module.

Installation Steps

Turn off the power at fuse or circuit box

1. Attach two fixture mounting screws to the mounting plate, and then secure it with two lock nuts. Adjust the length of the fixture mounting screws if necessary.
2. Attach the mounting plate to the outlet box using two mounting screws.
3. Attach the cover onto shade and let the threaded pipe through the hole of cover, then tighten it with flat washer and coupling.
4. Rod Connections:
 - a. Thread the fixture wires from the fixture through the lower rod, and then secure the lower rod onto fixture using the threaded pipe.
 - b. Thread the fixture wires through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
 - c. Thread the fixture wires through the upper rod, and then secure the upper rod onto the middle rod using the threaded pipe.
 - d. Thread the fixture wires through the fixture canopy, and then secure the fixture canopy onto the upper rod using the threaded pipe.

 
Note: Height adjustable from 10-3/4" to 64".
Use fewer rods if shorter length is desired.

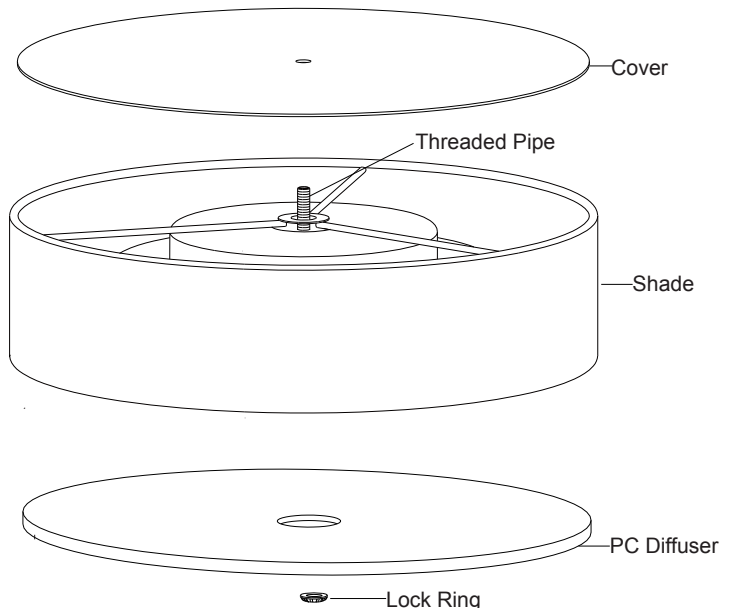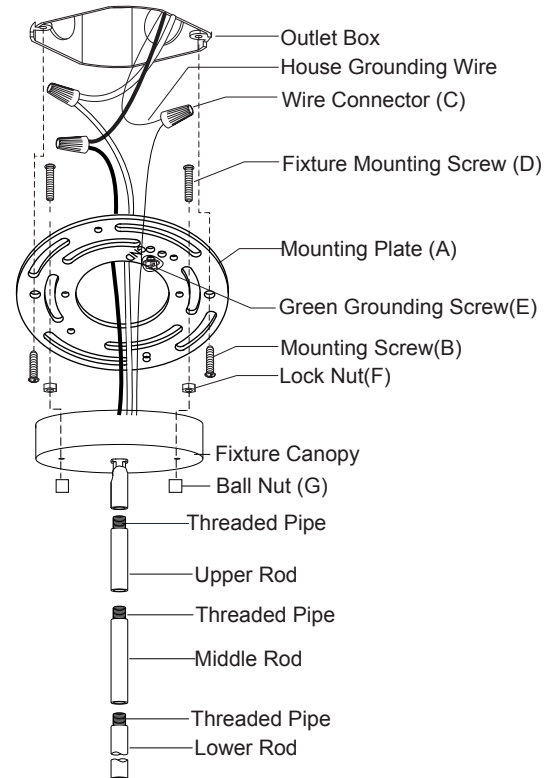


 **VAXCEL**

170301

5. Pull out the source wires from the outlet box. Make wire connections using wire connectors as follows:
 - Connect the black wire from the fixture to the black wire from the power source.
 - Connect the white wire from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire to the mounting plate with the green grounding screw, and then connect it to the house grounding wire with a wire connector.
 Carefully put the wires back into the outlet box.
6. Attach the fixture canopy to the mounting plate by inserting the fixture mounting screws, and then secure it with two ball nuts.

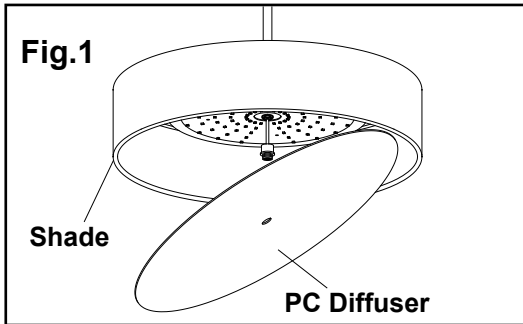


7. Push the pc diffuser into the shade with oblique angel. (Fig.1)

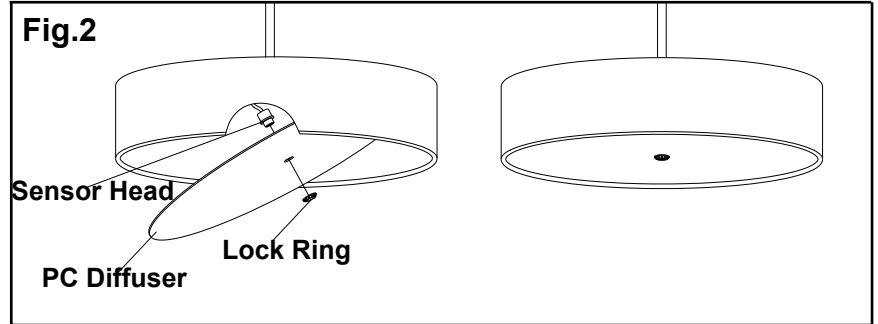

8. Insert the sensor head into the hole of pc diffuser while the half of pc diffuser reaches the shade, then tighten it with lock ring .Push the half pc diffuser into the shade and place it in place (Fig.2).

9. Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 3)

Turn on the power at fuse or circuit box

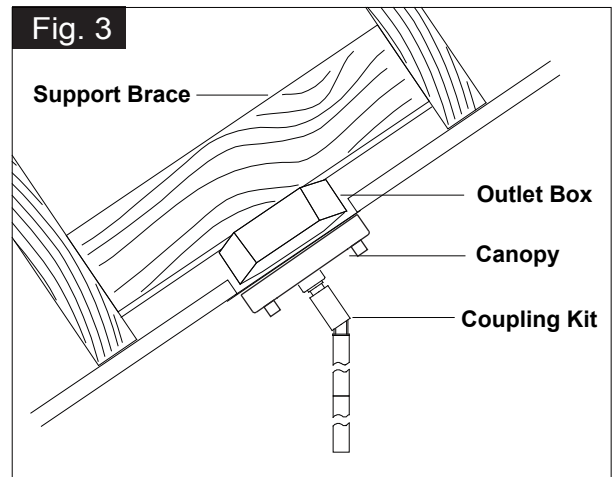


Function and Operation

 


The following parts are available for re-order if damaged or missing.


Spare Parts List:




Mounting Strap (A)




Mounting Screw (B)



 
Wire Connector (C)




Fixture Mounting Screw (D)



 
Green Grounding Screw (E)




Lock Nut (F)



Finial (G)




Lock Ring
X1
7151LR




Driver
X1
7153DD

Mounting Hardware
(1 SET)
5669MM For P0217
5675MM For P0218



PC Diffuser
X1
9863AC



Acrylic Cover
X1
9866AC

5-YEAR LIMITED WARRANTY:

All products are warranted to be free of defects in material and workmanship for five (5) years from date of purchase. This warranty is limited to the correction of any such defect, or the replacement of any such defective item(s), provided that: (a) we are properly notified and consent to return of the item(s) in question:(b) the item(s) is / are returned with proof of purchase date; and (c) it is found upon inspection by us that the item(s) is / are defective as noted above. This warranty does not cover labor costs, consequential damages, nor does it apply to any item(s) that have been improperly installed, overloaded, altered, or otherwise abused by the customer, its agent(s) or employee(s). Finishes are specially excluded from the terms of this warranty since they are subject to environmental maintenance deemed beyond our control. Other than the described obligation, we assume no further liability with respect to the sale or use of our products.We make no warranty, express or implied, and disclaim any warranty of merchantability or fitness for a particular purpose.

